
## TANDBERG MXP systems Basic Use Guidelines - Quick Sheet

The system is controlled with a remote control. Think of the remote control as a mobile phone with number keys and call keys. Use the arrow keys and OK to navigate the menu. The system's most commonly used functions are also accessible directly from the remote control.

The Infra Red (IR) sensor for the remote control is located in front of the WAVE II Camera. There is also a second IR-sensor located in the front of the Codec itself, which will be automatically enabled if the WAVE II Camera is not connected.

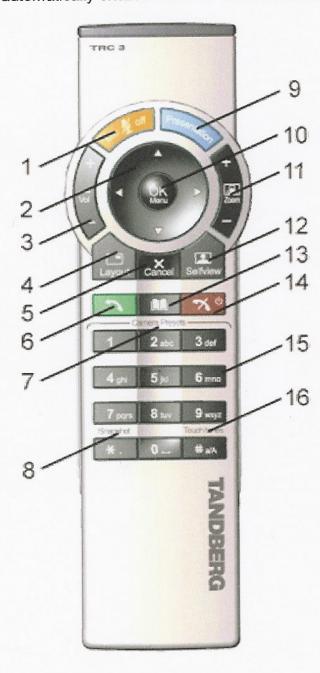



- 1. Mic Off turns your microphone on and off.
- Arrow keys are used for navigation in the menu and for moving the camera when the menu is hidden.
- 3. Volume + and adjusts the system volume.
- The Layout key toggles between full screen and different display layouts.
- 5. Cancel takes you back one step in the menu system. Also use Cancel to delete characters in an input field.
- Press the Call key to place a call.
- 7. Camera presets define specific camera positions. Press and hold a number key for 1 second to save the current camera position to that number key. To activate a preset whilst in a call, simply press and release that number key.
- Snapshot takes a snapshot of your video. (Only while you are in a call)
- 9. The **Presentation key** switches to a predefined presentation source.
- Press OK/Menu to show the menu and to select menu items.
- 11. Use Zoom + and to zoom the camera in and out.
- Selfview displays your outgoing video. Press Selfview again to turn selfview off.
- 13. Store and recall your video contacts via the system **Phone Book** for easy placement of calls.
- 14. Use the red End Call key to end the current call. Pressing this key when not in a call will place the system in Standby mode.
- Number/Letter keys function in the same manner as with a mobile or cellular phone.
- 16. Press **Touch tones** when you are in a call and need to dial extension numbers etc. (instead of presets).